


EXAMPLE
ONLY

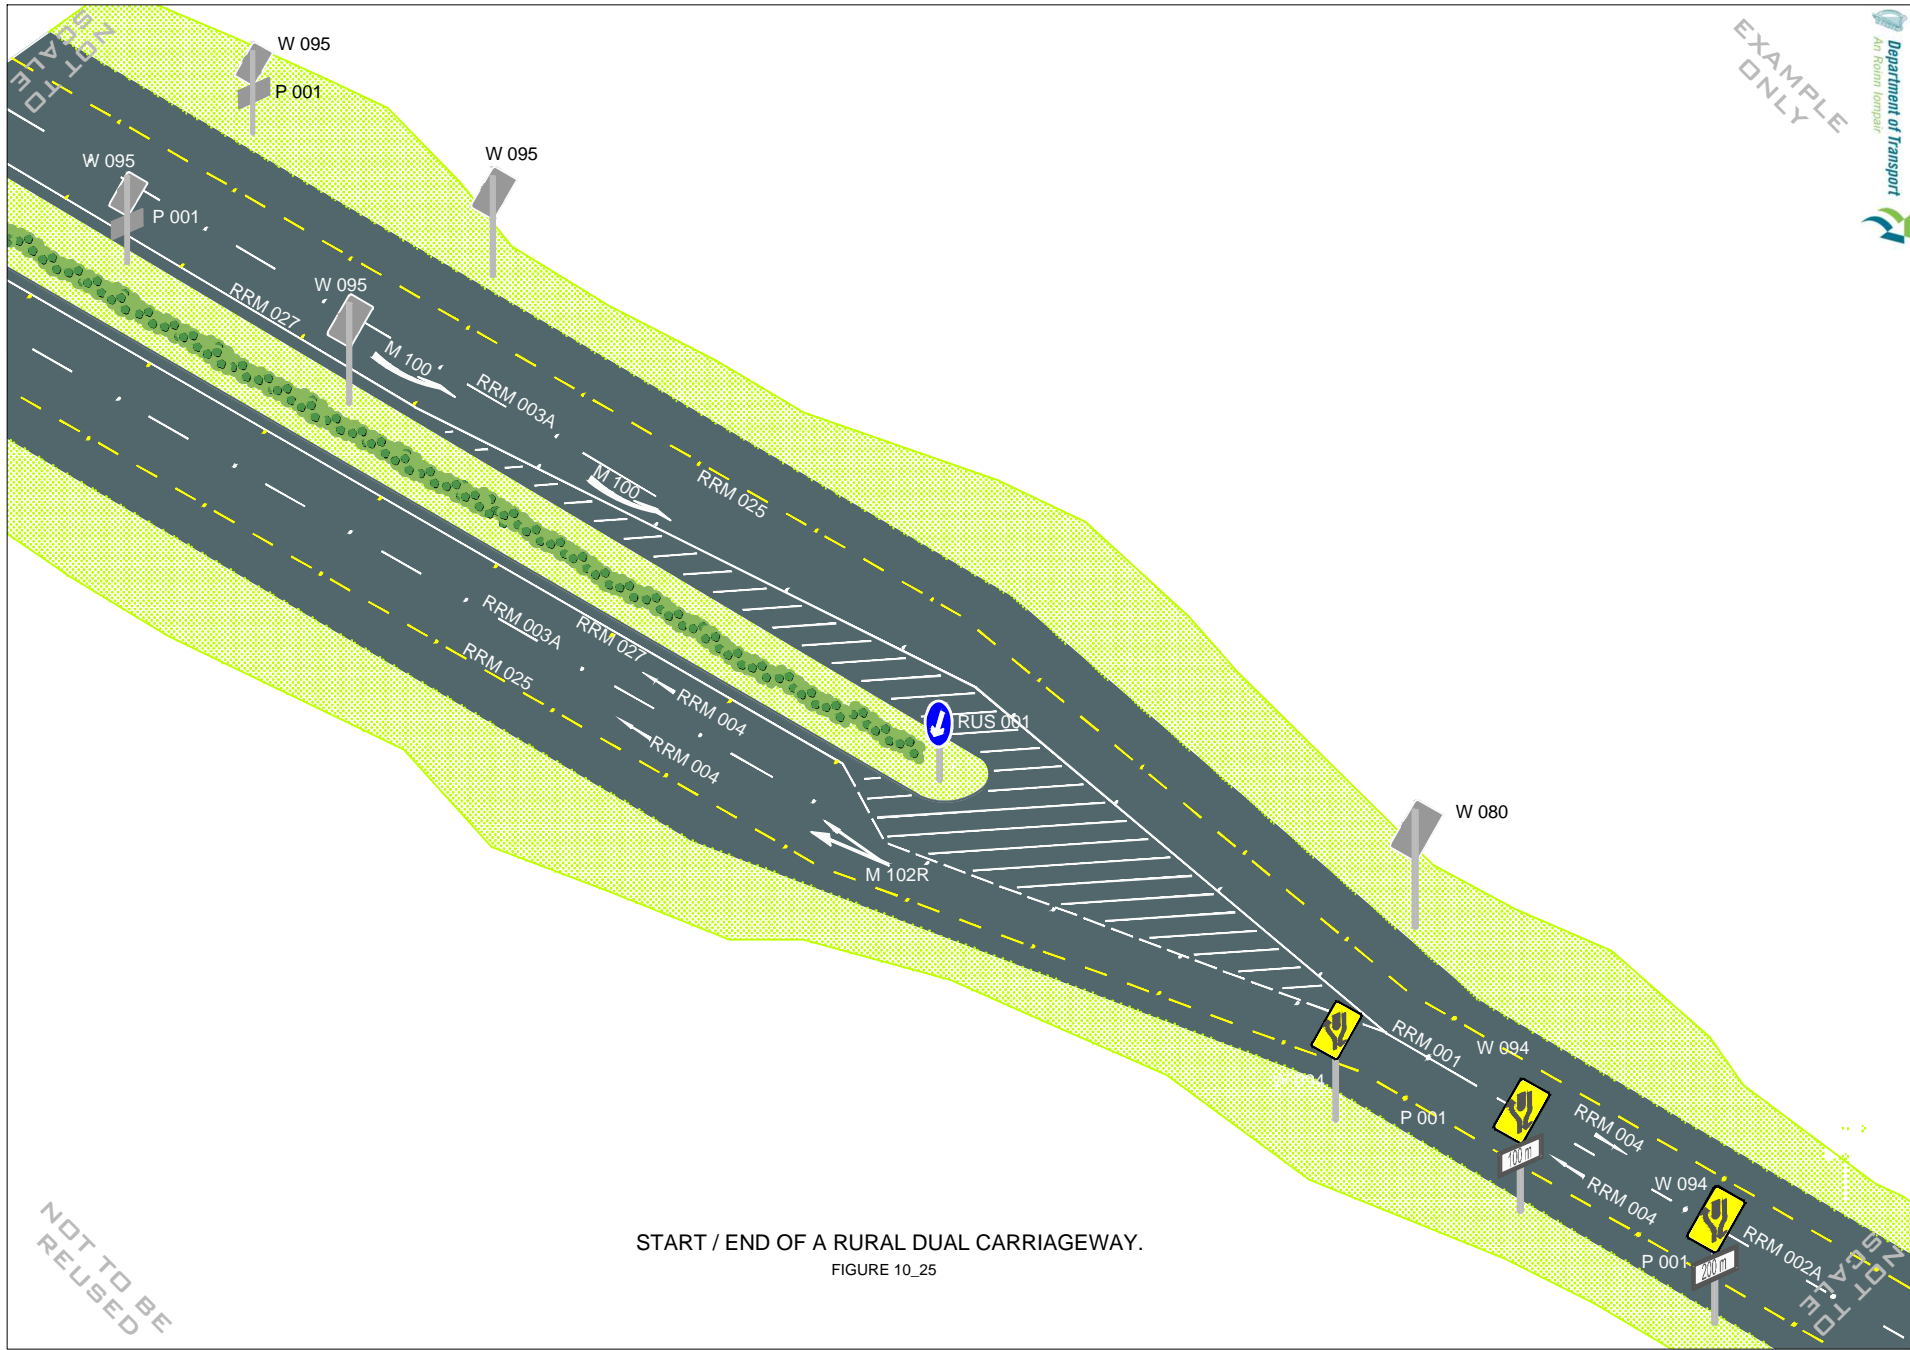

START / END OF A RURAL DUAL CARRIAGEWAY.
FIGURE 10_25

November 2010

10/33

NOT TO BE
REUSED

NOT TO BE
REUSED